

Welcome

Prepared for:



www.immunizationmanagers.org

LogTag Recorders
Stephen Rader
July 15, 2021

Agenda

- LogTag Recorders Overview
- LogTag Recorders' Immunization Products
 - Vaccine For Children (VFC)
 - Covid-19 Vaccine
- LogTag Online
- Typical Retail Pricing
- Technical Resources available for AIM Providers
- Questions and discussion

LogTag Recorders

- **LogTag North America**

- A sales office in North America, and Production & Logistics are also handled by LogTag North America
- LogTag products are sold through distributors and resellers, such as Control Solutions, Thermco, Global Sensors, MicroDAQ, and others.

- **New Zealand**

- LogTag support, administration, sales & marketing, research, and development center are in Auckland, New Zealand.
- Our shipments are from Hong Kong

All CDC VFC data loggers are available for low-temperature for COVID-19 vaccines



Temperature range -40°C to +99°C (-40°F to +210°F)



Temperature range -90°C to +40°C (-130°F to +104°F)

CDC / VFC Kit – TRED30-16R

- Up to 15,900 recordings
- Easy to read display
 - 30-day summary
- Built-in audible alarm



Includes: TRED30-16R, ST100K-15 External Sensor & Glycol Buffer,
NIST traceable Calibration Certificate
Additional Accessories: Wall Mount & Interface Cradle

CDC / VFC Kit – UTRED30-WiFi



- New large easy-to-read display
- Reset Min/Max temperature reading at any time
- Audible alarm & red LED signals a temperature alarm
- Real-time data automatically uploaded via WiFi to the LogTag Online cloud

Includes: UTRED-16, ST100K-15 External Sensor & Glycol Buffer, NIST traceable Calibration Certificate

Additional Accessories: Wall Mount & Interface Cradle

CDC / VFC Kit – UTRED30-16



- New large easy-to-read display
- Reset Min/Max temperature reading at any time
- Audible alarm & red LED signals a temperature alarm
- View alarm status for up to 30 days at a glance

CDC / VFC Kit – UTRED-16

- Low-cost solution
- Up to 16,000 recordings
- Easy to read display
- Can be connected to any computer with a USB port
- No interface cradle required.



Includes: UTRED-16, ST100K-15 External Sensor & Glycol Buffer, NIST traceable Calibration Certificate

Additional Accessories: Wall Mount & Interface Cradle

All vaccine data loggers are available for VFC and low-temperature for COVID-19 vaccines

Vaccine Kit Temperature range -40°C to +99°C (-40°F to +210°F)

UTRED-16	\$72
TRED30-16	\$147
UTRED30-16	\$190
UTRED30-WIFI	\$249

Low Temperature Vaccine Kit (Temperature range -90°C to +40°C (-130°F to +104°F))

UTREL-16	\$72
TREL30-16	\$147
UTREL30-16	\$190
UTREL30-WIFI	\$249

Vaccine Kits include logger, external probe, glycol buffer, wall-mount bracket, and a Calibration Certificate

LTI-HID - Standard Interface Cradle (Docking Station)

- New and improved design to replace the current LTI-USB Interface Cradle
- Can be used with TRED30-16R and any 3 silver contact pin loggers
- Uses drivers from Windows OS so no need to install proprietary drivers
- Must be connected to a computer



LTI-WiFi interface cradle

LogTag® Online

- Compatible with TRED30-16R and standard LogTag loggers with 3 silver contact pins
- Data is uploaded each time the logger is plugged in
- Downloaded data fully encrypted and uploaded via WiFi connection to LogTag Online cloud
- Uploaded data immediately available for viewing online



LTI-WM-WiFi interface cradle

- Real-time continuous data upload to LogTag Online Cloud
- Automatic notification of alarms via email and SMS text alerts
- Easily set up to work with your WiFi network
- Compatible with TRED30-16R and other LogTag models with 3 silver contact pins
- Ease of use – no special training or interaction required


LogTag® Online



Wi-Fi Products and **LogTag[®]Online**



- Automatic notification of alarms by email and text, 24/7

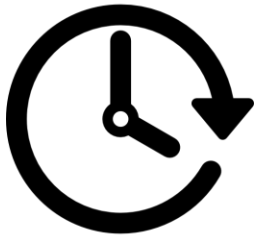

- Ease of use, simplifying data collection and saving you time



- Guaranteed data collection and regulatory compliance

What is LogTag Online?

LogTag[®]Online

- LogTag Online (LTO) is a Cloud-based online environmental management system providing alarm notifications, compliance, record storage and reporting functions.
- LTO allows its users to download data from LogTag dataloggers, view the data in the cloud, and allows the sharing and securing of the data using a permissions system.

Who sees LogTag Online?



- **Owner:** Responsible for full editing and assigning rights in the team and can manage ALL team settings including billing
- **Administrator:** Limited capability to edit team settings, has some assigning rights within the team.
- **Member:** Able to view Team activity, very limited or no authority to Manage Team settings
- **View Only:** Viewing of data and records only. No modification or editing is permitted. 'View Only' mode status in yellow is displayed in the top menu banner next to LTO logo

Dashboard

33 / 36 Locations 258 / ∞ File Limit 12 / ∞ Team Members


Pinned Locations (View all)

Create Location

Last Reading at 11:02 AM - 04-18-2019

Desk 2 UTRED30-WIFI

UTRED30-WIFI 36F5



Temperature **22.0°C**


⚠ ⓘ Monitoring (Last 24 hours)

INSPECT

Last Reading at 07:45 AM - 04-18-2019

Desk LTI-WM-WIFI

LTI-WM realtime readings with TRED30-16



Temperature **20.4°C**

⊗ Lost Connection

INSPECT

Recently Uploaded Files (View all)

File Name	Time Uploaded	Action
S/N:1050042121 (TRID30-7R)	(08:23 AM - 04-17-2019)	↓
S/N:8025005476 (TREL-8)	(10:58 AM - 04-11-2019)	↓
S/N:6861912345 (TRED30-16R)	(12:53 PM - 04-08-2019)	↓
S/N:8025005476 (TREL-8)	(12:47 PM - 04-08-2019)	↓
TRED30-16R- 7862910381 Started 3-28-20..	(09:22 AM - 04-04-2019)	↓

Recently Registered Devices (View all)

Register Device

Model	Device Name	Serial Number	Last Connection
HAXO-8	HAXO-8	S/N:1010136263	08:25 AM - 04-17-2019
TRED30-16R	TRED30-16R	S/N:6761912346	
LTI-WM-WIFI	LTI-WM-WIFI	S/N:A0B5900087QT	09:01 AM - 04-17-2019
SRIL-8		S/N:1071028229	04:24 PM - 04-12-2019
UTRED30-WIFI	Virtual UTRED30-Wifi	S/N:A9A1999995NT	08:32 AM - 04-10-2019

Freezer


Chart From: 03-23-2019

Chart To: 04-23-2019

EXPORT

1 Day | 1 Week | 1 Month | 1 Year

Log Time: 2019/04/13 19:51:02
— Temperature: -16.6

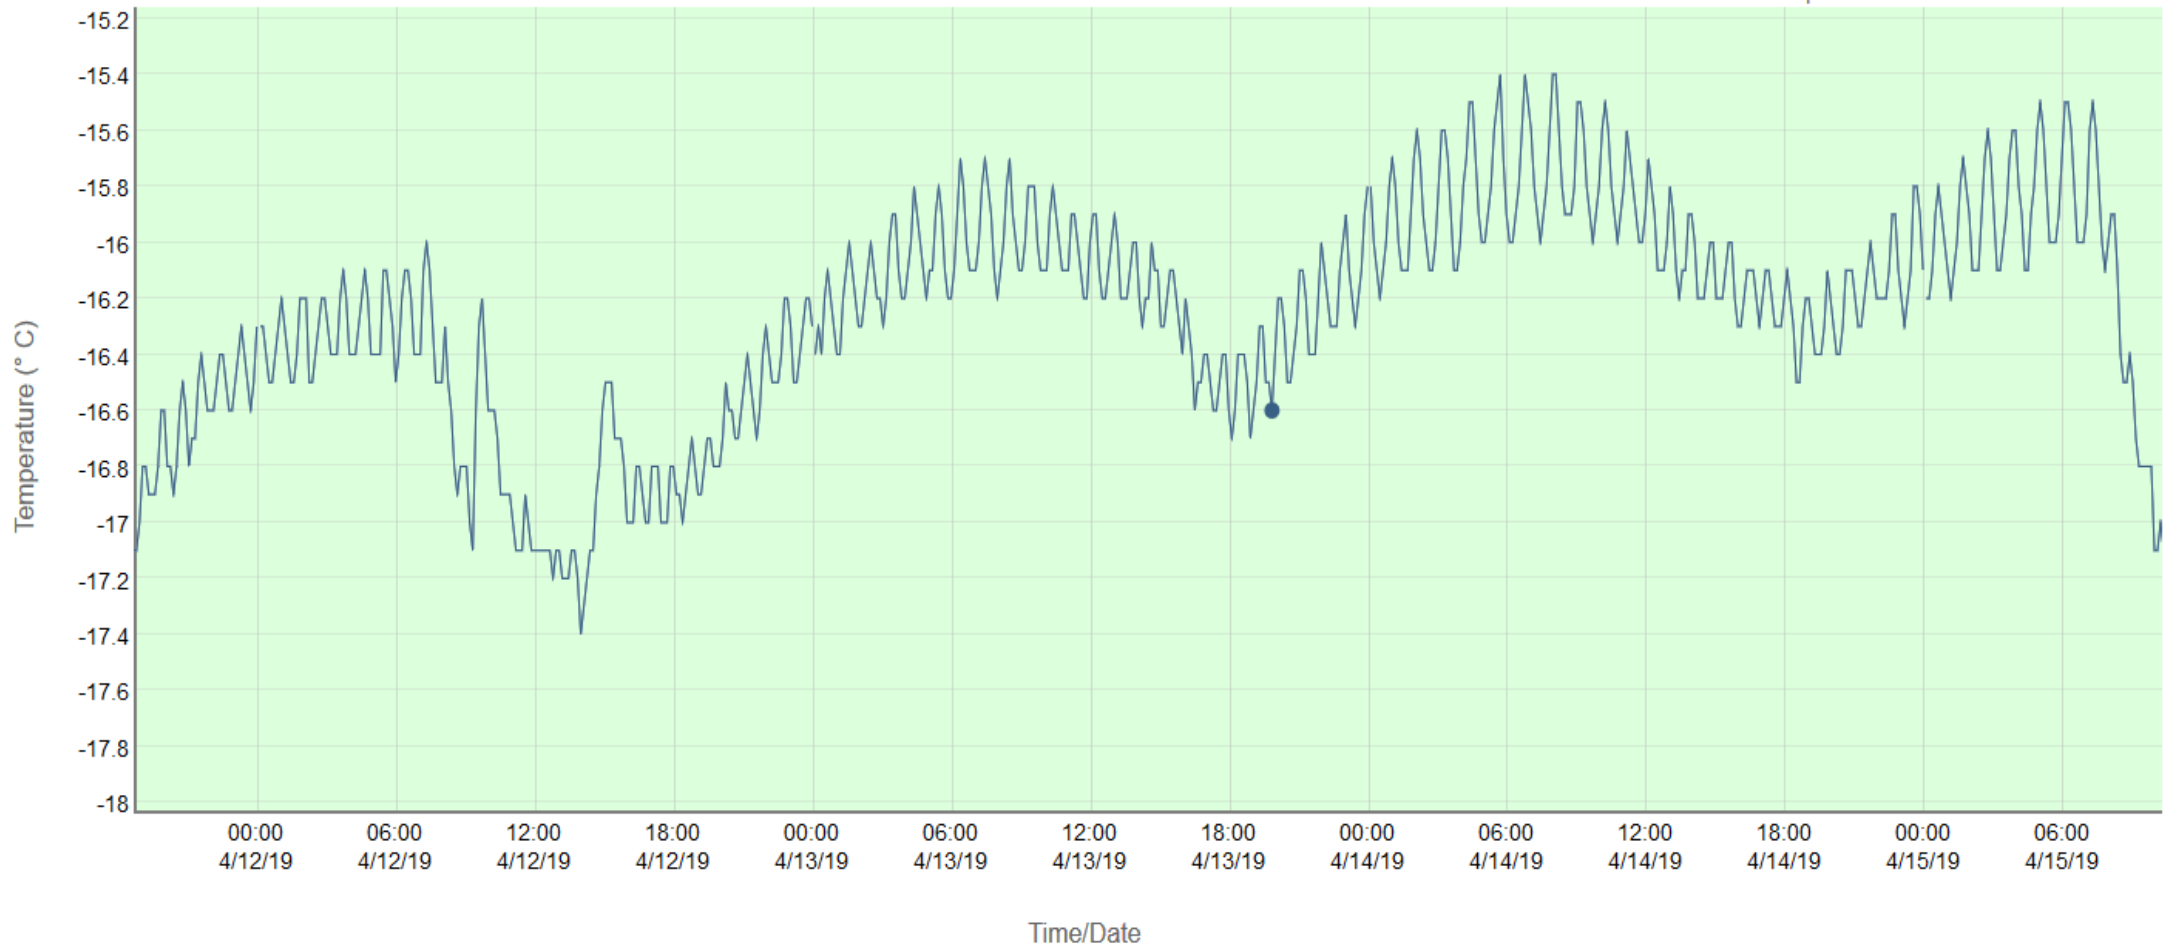

Typical Retail Pricing

Vaccine Kits

Also available in low temperature to -90c

- UTRED-16 \$115
- TRED30-16 \$147
- UTRED30-16 \$190
- UTRED30-WIFI \$249

(All Kits include ST100K-15 External Sensor, Glycol Buffer, NIST Traceable Calibration Certificate)

LogTag Online

- LT1001 \$50 12-month license fee per location
- LT2001 \$90 24-month license fee per location

Interfaces available for the TRED30-16

- LTI-HID \$49 Desktop USB Interface Cradle for rapid data transfer to LogTag® Analyzer software
- LTI-WiFi \$90 WiFi Interface Cradle to download data without access to a computer and installed software.
- LTI-WM-WiFi \$110 Wall Mount Interface Cradle for real time upload of data without computer or installed software.

Optional Accessories

- WMB-01 \$5 Wall Mount Bracket for mounting a TRED30-16 to a wall, door, or vertical surface
- WMB-02 \$7 Wall Mount Bracket for mounting a larger UTRED30 to a wall, door, or vertical surface

Technical Support and Resources

1. Training Videos: <https://www.youtube.com/channel/UCfjhHbn3E-9sagox6fl314Q/videos>
2. QuickStart Guides: (<https://logtagrecorders.com/>)
3. User Guides: (<https://logtagrecorders.com/>)
4. Webinars: Available on request
5. Telephone Support: (908) 209-7477
6. Email Support: (srader@logtagrecorders.com)
7. Distributor Support: Available where loggers are purchased

Thank You

Stephen Rader

Vice President

LogTag Recorders USA

Website: www.logtagrecorders.com

Email: srader@logtagrecorders.com

Phone: (908) 209-7477